

STANDARD A01 pro

Paring with another BBT device :

1. Press&hold ② 2sec. to turn ON the power
(After turned on the power, LED will flash 1 time The color of the LED will be shown battery status) Blue=Full
Purple=Middle Red=Low
2. Press&hold ① 3sec untill LED start flashing RED, when both devices are ON status.
Then, Click one of BBT ① button ***Do not press both!**
3. Both BBT devices LED become blue color slow flashing.
The devices are paired.

Paring with the mobile phone:

1. Press&hold 4sec ② when the BBT power is **OFF** status untill LED start flashing RED/BLUE.
2. Your mobile phone bluetooth must be serching mode status.
3. Wait untill your mobile phone shows up "BBT pro" and select it. BBT LED become blue slow flash. The devices are paired.

*If you are already paired with your phone. You don't need to do the paring process for music button.

HOW TO USE :

■INTERCALL■

Press one of device' s ① buton. After 4 sec. start to talk

***DO NOT press both device each other**

Press ① to hung up talking

■Handsfree■

Incoming call:

Press ② to pick up the phone call

Hung up call:

Press ② to hung up the phone call

Redial:

Press ② 2 times quickly

■Music play■

Play and Stop music:

Press ③ to play or stop music

Forward and Rewind:

Press&hold 2sec. (+) for forward music. (-) for rewind

■Reset■

When the power if **OFF**. Press&hold 5sec.①&② at the same time. Untill purple color LED will lights up.

*After reset. You need to do the first set up process.

MASTER AO1Mpro

Paring with multipul devices :

1. Press&hold ② 2sec. to turn ON the power
(After turned on the power, LED will flash 1 time The color of the LED will be shown battery status) Blue=Full
Purple=Middle Red=Low
2. Press&hold ①&③ 3sec untill LED start flashing RED & BLUE
Now MASTER unit entered the paring mode.
Then, double Click ① (quickly press 2 times)
*Before double click, STANDARD unit
3. Both BBT devices LED become blue color slow flashing.
The devices are paired.

Paring with 2nd or 3rd device:

See above process, and enter the paring mode, and double Click ② button. The 3rd device is also same process with ③ button.

*More devices, distance will be more shorter

1:1=1600m 1:2=800m each 1:3=400m each

(We recommend to use 1:2)

*MASTER cannot pair with a mobile phone

HOW TO USE :

■INTERCALL■

Press 1 time ① button to call to the device you paried

*Do not press CH1,2,3 together or too quickly

after CH1 is connected, then call out CH2 or CH3

■Stop intercall■

Press 2 time quickly (double click) ① to stop CH1 device

The same process for CH2 or CH3

■Call for ALL■



Press 1 times CH1&CH3 at the same time

■Reset■

When the power if OFF, Press&hold 5sec.①&② at the same time.
Untill purple color LED will lights up.

*After reset, You need to do the first set up process.

■Detail■

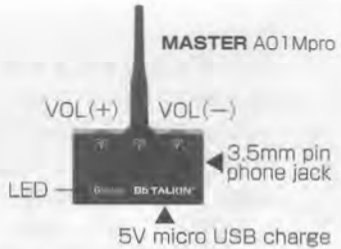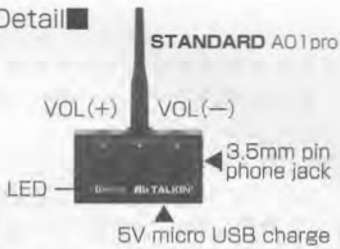

- ①Intercall
- ②Power/Handsfree
- ③Wireless MUSIC(A2DP)

- ①Intercall CH1
- ②Power, Intercall CH2
- ③Intercall CH3

■Sepcs■

BLUETOOTH ver.....	3.0
Intercall talk time.....	15h
Stand by time	700h
Intercall distance *Open field.....	1600m
Charge time.....	2h
Weight.....	62g
*MASTER unit communication distance and talking time are depends on paring numbers	

■Charing■

- *AC adaptor 500mA-1A 5V
- *Please make sure the device is completely dried before charging
- *When LED shows blue color which means battery is full please disconnect the wire and stop charging. DO NOT keep charging.

Limited Warranty

This limited warranty covers defects in materials and workmanship in this product for twelve month (12) months for main device only, other parts are (6) month from the date of original purchase of this product.

The warranty obligations of BbTALKIN for this product are limited to the terms set forth below:

This limited warranty does not cover any damage, rusty USB part, deterioration or malfunction resulting from any alteration, modification, improper or unreasonable use or maintenance, misuse, abuse, accident, neglect, exposure to excess moisture, fire, improper packing and shipping, lightning, power surges, or other acts of nature. This limited warranty does not cover any damage, deterioration or malfunction resulting from the installation or removal of this product from any installation, any unauthorized tampering with this product, any repairs attempted by anyone unauthorized by BbTALKIN to make such repairs, or any other cause which does not relate directly to a defect in materials and/or workmanship of this product. This limited warranty does not cover cartons, equipment enclosures, cables or accessories used in conjunction with this product.

If this product is returned to BbTALKIN or the authorized dealer from which it was purchased or any other party authorized to repair BbTALKIN products, this product must be insured during shipment, with the insurance and shipping charges prepaid by you. If this product is returned uninsured, you assume all risks of loss or damage during shipment. BbTALKIN will not be responsible for any costs related to the removal or re-installation of this product from or into any installation. BbTALKIN will not be responsible for any costs related to any setting up this product, any adjustment of user controls or any programming required for a specific installation of this product.

It may damage your ears, if using too long or high volume sound. BbTALKIN will not be responsible.

It may damage the device to use third-party USB wire headphone or earphones etc., BbTALKIN will not be responsible.

Only the original purchaser of this product is covered under this limited warranty. This limited warranty is not transferable to subsequent purchasers or owners of this product.

How to Obtain a Remedy under this Limited Warranty

To obtain a remedy under this limited warranty, you must contact either the authorized BbTALKIN reseller from whom you purchased this product or the BbTALKIN office nearest you. For a list of authorized BbTALKIN resellers and/or BbTALKIN authorized service providers, please visit our web site at www.bbtalkin.com or contact the BbTALKIN dealer nearest you. In order to pursue any remedy under this limited warranty, you must possess an original, dated receipt as proof of purchase from an authorized BbTALKIN reseller. If this product is returned under this limited warranty, a return authorization number, obtained from BbTALKIN, will be required. You may also be directed to an authorized reseller or a person authorized by BbTALKIN to repair the product. If it is decided that this product should be returned directly to BbTALKIN, this product should be properly packed, preferably in the original carton, for shipping. Cartons not bearing a return authorization number will be refused.

Limitation on Liability

THE MAXIMUM LIABILITY OF BbTALKIN UNDER THIS LIMITED WARRANTY SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID FOR THE PRODUCT. TO THE MAXIMUM EXTENT PERMITTED BY LAW, BbTALKIN IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY. Some countries, districts or states do not allow the exclusion or limitation of relief, special, incidental, consequential or indirect damages, or the limitation of liability to specified amounts, so the above limitations or exclusions may not apply to you.

WARNING

- *The main device is not water proof.
- *DO NOT modify or disassemble the device.
- *The area you cannot use.
(In the airplane, near the person with medical devices or equipment such as pacemaker etc..)
- *Do NOT expose this device to extreme temperature or humidity place.
- *The device must store at room temperature out of direct sunlight.
- *When the device gets damaged, stop using immediately.